



TRASAM HD200

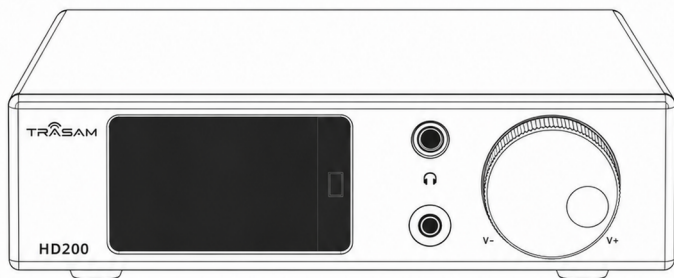


User Manual

Desktop DAC / Headphone Amp / Preamp

Front / Rear Panel

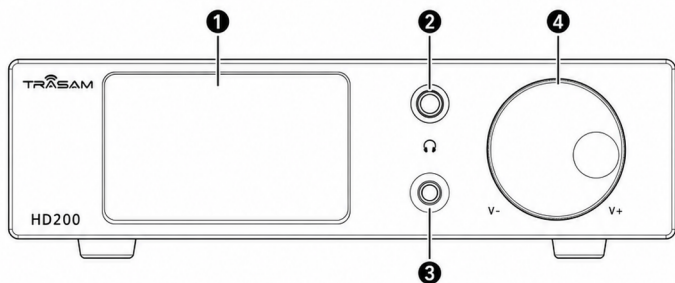

- ❶ TFT Display
- ❷ 4.4mm Balanced
- ❸ 3.5mm Headphone
- ❹ Volume / Menu Knob

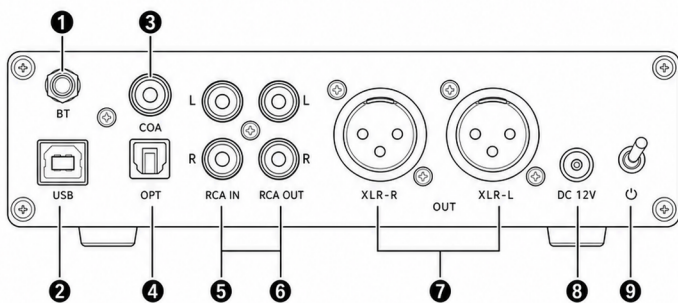

- ❶ BT Antenna
- ❷ USB-B
- ❸ COA
- ❹ OPT
- ❺ RCA IN
- ❻ RCA OUT
- ❼ XLR OUT
- ❽ DC 12V
- ❾ Power Switch

Safety & Package

! Safety Notes



Use DC 12V / 2.5A adapter



Turn volume down before headphones



XLR / RCA are line outputs




Passive speakers need amplifier



Do not open or modify




Package Contents

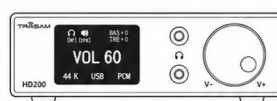


HD200 Unit



Remote Control
Remote: AA battery, not included

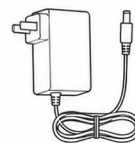

Power Adapter

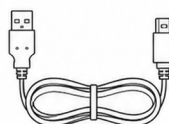

USB Cable




Bluetooth Antenna




User Manual

Quick Start


1 Connect Power

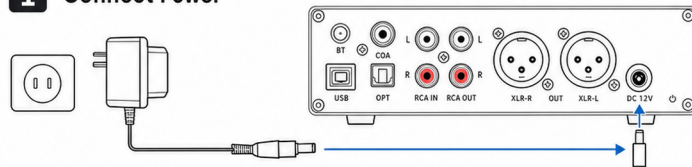

2 Connect Input

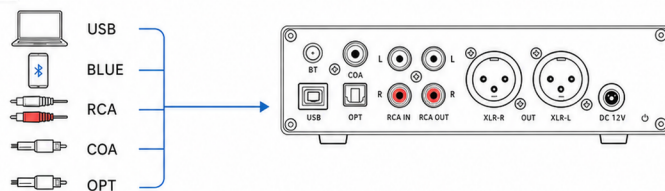

3 Connect Output

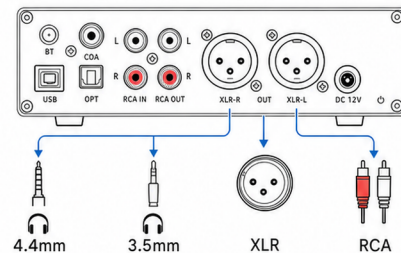


4 Select Input and Adjust Volume



Passive speakers require an external amplifier.

Input Modes

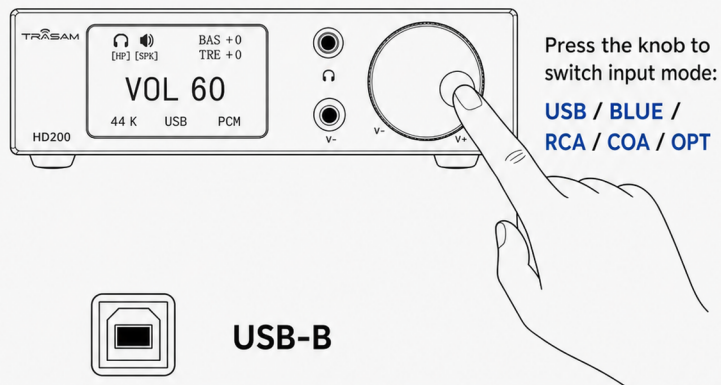

USB-B



BLUE



RCA IN



COA



OPT



Bluetooth pairing name: HD200




USB driver: <https://www.trasam.cn/support/>

Output Use


1. Headphones

Use 4.4mm or 3.5mm output.

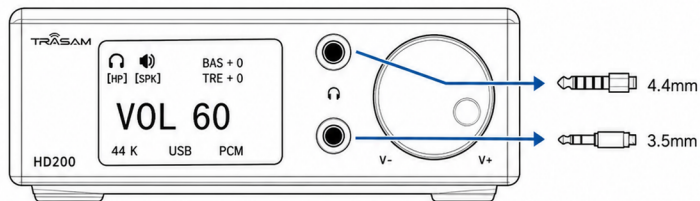

2. Line Output

Use XLR or RCA output for powered speakers, active monitors or amplifier.


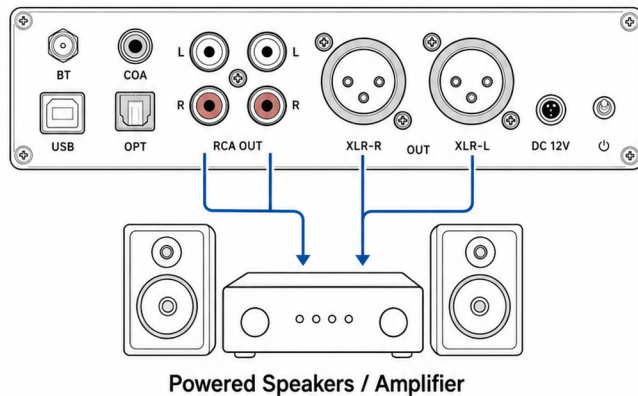


Powered Speakers / Amplifier



Do not connect passive speakers directly.

Knob & EQ Control

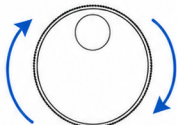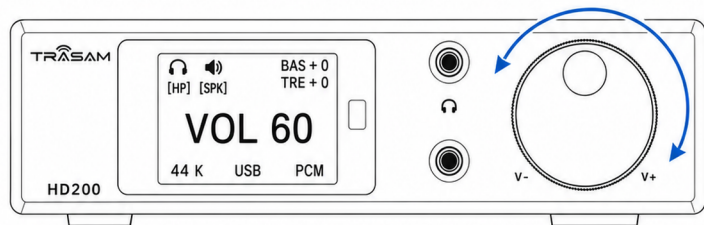

Rotate:
Volume 0-60



Press: USB /
BLUE / RCA /
COA / OPT





Long Press:
Enter / Exit EQ

EQ Operation


In EQ mode:

- Rotate to adjust value
- Press to switch TRE / BAS
- Long press to exit

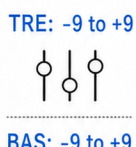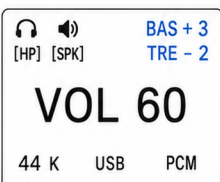

Blue = Active EQ control

Remote Control

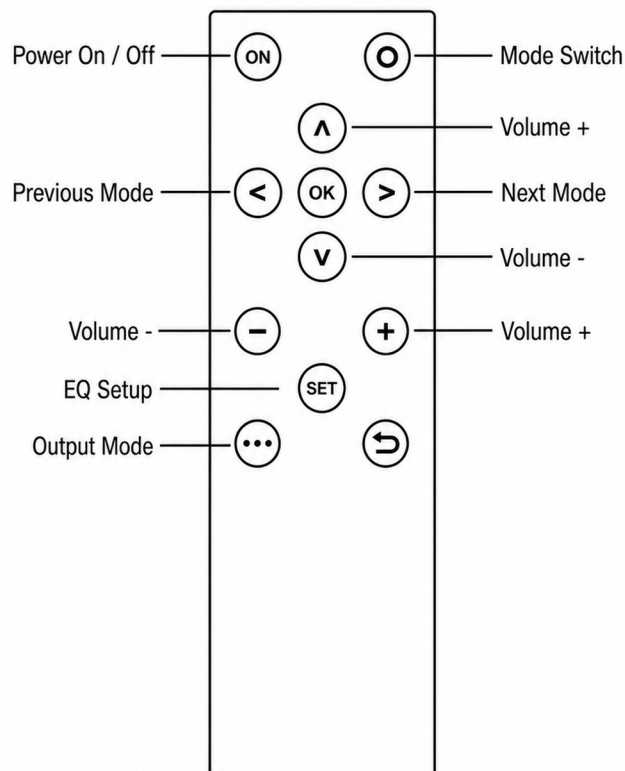

Battery: 1 x AA battery, not included.

Unmarked keys are inactive.

Warranty: 1 year

Support: vghcai@trasam.cn

Website: <https://www.trasam.cn/>

Driver: <https://www.trasam.cn/support/>